

CMi4110 User's Manual English



CONTENTS

1	DOCUMENT NOTES				
	1.1	COPYRIGHT AND TRADEMARK			
	1.2	CONTACTS	3		
2	IMPO	RTANT USAGE AND SAFETY INFORMATION	4		
3	USIN	G THIS MANUAL	5		
	3.1	PURPOSE AND AUDIENCE	5		
	3.2	ONLINE RESOURCES			
	3.3	SYMBOLS	5		
4	INTR	ODUCTION	6		
	4.1	Purpose			
	4.2	APPLICATION DESCRIPTION			
	4.3 4.4	PRODUCT FEATURESCOMPATIBILITY			
	4.4	COMPATIBILITY			
5	GET1	ΓING STARTED	8		
	5.1	Purpose	_		
	5.2	PRODUCT SPECIFICATION			
	5.3	MOUNT AND START-UP THE DEVICE			
		5.3.1 Mounting and connection			
		5.3.3 Start-up and LED indications			
		5.3.4 Switch off/reboot module			
6	ADMI	INISTRATION REFERENCE	11		
	6.1	Purpose			
	6.2	SECURITY AND ACCESS CONTROL			
	6.3	CONFIGURATION OPTIONS			
	6.4	ADAPTIVE DATA RATE (ADR)			
	6.5	Transmit interval			
		6.5.1 EcoMode	12		
	6.6	MESSAGE FORMATS	13		
		6.6.1 Message structure			
		6.6.2 Structure and payload			
	6.7	DOWNLINK	28		
7	TECH	HNICAL SPECIFICATIONS	30		
8	TYPE	E APPROVALS	32		
9	DOC	UMENT HISTORY	33		
	9.1	Versions	33		
10	REFE	ERENCES	34		
	10.1	TERMS AND ABBREVIATIONS	34		
	10.2				



1 Document notes

All information in this manual, including product data, diagrams, charts, etc. represents information on products at the time of publication, and is subject to change without prior notice due to product improvements or other reasons. It is recommended that customers contact Elvaco AB for the latest product information before purchasing a CMi Series product.

The documentation and product are provided on an "as is" basis only and may contain deficiencies or inadequacies. Elvaco AB takes no responsibility for damages, liabilities or other losses by using this product.

1.1 Copyright and trademark

© 2020, Elvaco AB. All rights reserved. No part of the contents of this manual may be transmitted or reproduced in any form by any means without the written permission of Elvaco AB. Printed in Sweden.

CMi Series is a trademark of Elvaco AB, Sweden.

1.2 Contacts

Elvaco AB Headquarter Kabelgatan 2T 434 37 Kungsbacka SWEDEN

Phone: +46 300 30250 E-Mail: <u>info@elvaco.com</u>

Elvaco AB Technical Support Phone: +46 300 434300 E-Mail: support@elvaco.se

Online: http://www.elvaco.com



2 Important usage and safety information

The following safety precautions must be observed during all phases of the operation, usage, service or repair of any CMi Series product. Users of the product are advised to convey the information to users and operating personnel and to incorporate these guidelines into all manuals supplied with the product. Failure to comply with these precautions violates safety standards of design, manufacture and intended use of the product. Elvaco AB assumes no liability for customer's failure to comply with these precautions.

CMi4110 receives and transmits radio frequency energy while switched on. Remember that interference can occur if the product is used close to TV sets, radios, computers or inadequately shielded equipment. Follow any special regulations and always switch off the product wherever forbidden, or when you suspect that it may cause interference or danger.



3 Using this manual

3.1 Purpose and audience

This manual provides all information needed to mount, deploy and configure CMi4110 (Landis+Gyr description: WZU-LoRa) and targets system integrators.

3.2 Online resources

To download the latest version of this user's manual, or to find information in other languages, please visit http://www.elvaco.com/.

3.3 Symbols

The following symbols are used throughout the manual to emphasize important information and useful tips:



The Note symbol is used to mark information that is important to take into consideration for safety reasons or to assure correct operation of the meter connectivity module.



The Tip symbol is used to mark information intended to help you get the most out of your product. It can for example be used to highlight a possible customization option related to the current section.

Table 1 provides information on how the product should be used.

Symbol	Description
	Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Contact your Local Authority for recycling advise.
	Electrostatic-sensitive device. Please observe the necessary ESD protective measures when installing the module.

Table 1: Usage information



4 Introduction


4.1 Purpose

This chapter provides a general description of CMi4110. In the next-coming sections you will learn more about possible applications for the product and how CMi4110 can be combined with other products to build versatile solutions.

4.2 Application description

CMi4110 is a cost-effective LoRaWAN meter connectivity module, which is mounted in a Landis+Gyr UH50 meter or a UC50 calculator. It uses a very energy-efficient scheme to deliver meter data to a receiving (application) server over a LoRaWAN network. Meter data is securely transmitted, using LoRaWAN end-to-end security scheme.

CMi4110 can both be retrofitted into deployed meters or mounted before deployment.

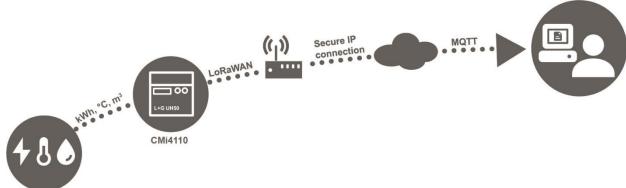

4.3 Product features

CMi4110 has the capability to offer a combination of battery operation with very long lifetime and a versatile application through its many configuration options. Key features of the module include:

• LoRaWAN certified

The CMi4110 is certified according to LoRaWAN alliance.

See https://lora-alliance.org/lora products/cmi4110ext/ for more info

Long battery lifetime

The module's EcoMode feature enables the module to achieve a battery-lifetime of at least 11+1 years.

No meter installation needed

As soon as the meter connectivity module has been mounted and started up, it will join the LoRaWAN network and start delivering meter data, i.e. no manual steps need to be taken in order to install the product in the meter.

• Quick commissioning

The product uses Elvaco's One-Touch Commissioning (OTC) solution to securely and quickly configure products deployed. Using Elvaco's OTC App, simply enter your desired settings and place your phone on the right side of the L+G UH50 meter / UC50 calculator. New settings will be applied instantaneously via NFC.

• A unique and flexible message scheme

- Meter data aligned with meter's internal clock and redundant daily energy values enables coordinated high-precision readouts without network congestion and assures reliable delivery of daily energy consumption.
- Several message formats to choose between, including JSON, gives the right fit for the unique demands of each application.



4.4 Compatibility

CMi4110 is compatible with all L+G UH50 meters using software version 5.15 or higher as well as with all L+G UC50 calculators using software version 8.06 or higher.

CMi4110 is supplied with power from the UH50/UC50 D cell battery. The module is also compatible with Elvaco's 230V CMip2110 PSUs and with the following PSUs from Landis+Gyr: WZU-AC230, WZU-AC110, WZU-ACDC24-00.




Getting started 5

5.1 **Purpose**

This chapter provides instructions on how to get started with the CMi4110. After reading and carefully following each step of this chapter, your meter connectivity module will be mounted, connected and started up.

Product specification 5.2

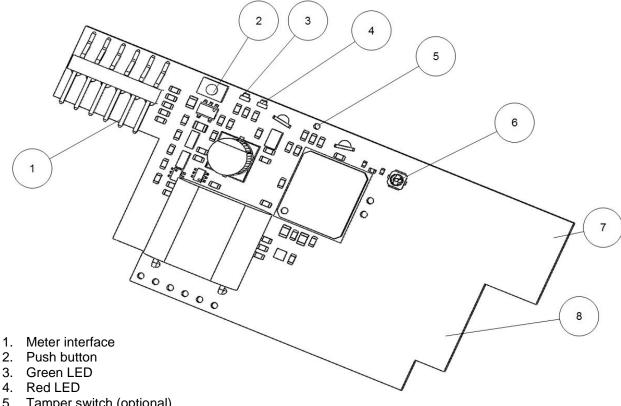

- 5. Tamper switch (optional)
- 6. External antenna connector (optional)
- 7. LoRa antenna
- 8. NFC antenna

5.3 Mount and start-up the device

Mounting and connection

CMi4110 is mounted in module slot 2 of a L+G UH50 heat meter or a L+G UC50 heat calculator.

5.3.2 Connection of antenna

If using CMi4110Ext, the SMA connector (6) is used to connect an external antenna. Please order your desired antenna (wall-mount or magnet-mount) from the Elvaco (or L+G) accessory assortment.



Make sure to mount the antenna at least 0.5 meters away from the meter in order not to disturb the meter and attached cables.



5.3.3 Start-up and LED indications

Module activation

Upon delivery, CMi4110 is set to passive mode, which means no messages will be transmitted from the module. There are two ways to activate the module:

- 1. Press down the push button (2) for at least 5 seconds until the green LED lights up, then release the button. A few seconds (1 to 11 seconds) later, CMi4110 will indicate start-up by flashing red and green LEDs for one second.
- 2. Via the Elvaco OTC app. Go to **Apply mode**, set the Module power to "active" and click **Apply settings.** Place the phone on the right side of the meter. The mobile phone should vibrate three times. This indicates that settings have successfully been applied.

Network join (FW<1.07)

After activation, CMi4110 will attempt to join the LoRaWAN network. The phase is indicated by short flashes every 5th second on the green LED. When CMi4110 succeeds in joining the LoRaWAN network, the green LED will lighten up for 8 seconds, as illustrated by Figure 1.

If the module fails to join the LoRaWAN network after the first 6 attempts, it will backoff for more time for each new retry until the delay between each retry is more than hours. This is initiated to conserve battery.

A new join attempt cycle can be manually started anytime by pressing down the push button (2) for at least 5 seconds, until the green LED lights up, and then release the button. It will do retries on both DR0 and DR5.

When the module has joined the LoRaWAN network, meter data will initially be transmitted from the module every minute (regardless of transmit interval settings) in order to set the right data rate. After 10 minutes of calibration, the module will start to deliver meter data using its configured settings.

Network join (FW>=1.07)

After activation, CMi4110 will attempt to join the LoRaWAN network. The phase is indicated by short flashes every 5th second on the green LED. When CMi4110 succeeds in joining the LoRaWAN network, the green LED will lighten up for 8 seconds, as illustrated by Figure 1.

The module tries to join the LoRaWAN network with six requests, seven seconds apart, then sleeps for twelve hours and then sends another six requests. This sequence goes on forever.

A new join attempt cycle can be manually started anytime by pressing down the push button (2) for at least 5 seconds, until the green LED lights up, and then release the button. It will do retries on both DR0 and DR5.

When the module has joined the LoRaWAN network, meter data will initially be transmitted from the module every minute (regardless of transmit interval settings) in order to set the right data rate. After 10 minutes of calibration, the module will start to deliver meter data using its configured settings.



Figure 1: Network join LED indication





When activation-by-personalization (ABP) is used, the module does not perform a join operation before sending messages. Therefore, the 8-second indication of connection will **not** appear in ABP mode.

Soft start

In rare cases, if the battery is weak, the module will perform a soft start to be able to start-up despite the condition of the battery. The soft start takes 10 minutes to complete. The red LED will blink shortly every 10th second until the start-up has completed.



Figure 2: Soft start LED indication

5.3.4 Switch off/reboot module

To reboot the module, press and hold the push button (2) for 5-15 seconds. Release the button when the green LED is lit.

To switch off the module, press and hold the push button (2) for 15-20 seconds. Release the button when the red LED is lit.

 


Figure 3: Reboot/switch off module



6 Administration reference

6.1 Purpose

This chapter contains detailed information about configuring options for CMi4110 and format of the different message types transmitted from the module.

6.2 Security and access control

CMi4110 has a configuration lock feature, which prevents unauthorized access to the module. When configuration lock has been enabled, a Product Access Key will be needed to access the device. For more information about security and access control for CMi4110, please refer to the One-touch commissioning (OTC) documentation, available on the Elvaco website.

6.3 Configuration options

CMi4110 is configured via the Elvaco OTC app. It uses NFC to transfer settings to the module. Downlink may also be used to for some applications, see section 6.7 Downlink for more information.



Please note that the Elvaco OTC app is only compatible with Android phones with Android 5.0 or later.

Table 2 provides a summary of all settings.

Field name (Abbr.)	Description	Default value	Device access Locked device & correct Product Access Key or Open device	Device access No Product Access Key	Downlink
Meter ID	Meter identification number of the meter. Not configurable.	N/A	Readable	Readable	N/A
Power mode	Used to activate/deactivate the module.	Passive	Readable / Writeable	Readable	N/A
Message format	The message format determines the structure and payload of the telegram sent from the module.	0 (Compact)	Readable / Writeable	Readable	N/A
EcoMode	When activated, 11+1 years of battery-life is guaranteed by adapting the transmit interval of the module to current signal conditions.	On	Readable / Writeable	Readable	Writeable
Maximum daily transmissions	Maximum number of transmissions allowed per day.	Inactive	Readable / Writeable	Readable	Writeable
Date & Time	Date and time set for the meter.	Current date/time	Readable / Writeable	Readable	Writeable
Set Time Relative	Adjusts the time of the meter relative to the current time.	N/A	Writeable	N/A	Writeable



Configuration Lock	Locks the module to prevent unauthorized access.	Open	Readable / Writeable	Readable	Writeable
LoRaWAN se	ettings				
Device EUI	Unique module identification number. Not configurable.	Device-unique 64-bit number	Readable	Readable	N/A
Activation type	Sets the way the device joins the LoRaWAN network.	OTAA	Readable / Writeable	Readable	N/A
Network join	Used to display whether the module has joined the LoRaWAN network.	N/A	Readable	Readable	N/A
Join EUI	Application ID that determines where data ends up.	0x 00 00 00 00 00 00 00 00	Readable / Writeable	Readable	N/A
Application key	Encryption key for payload data (only applicable in OTAA mode).	Device-unique 128-bit number	Writeable	N/A	N/A
Application session key	Encryption key for payload data (only applicable in ABP mode).	Device-unique 128-bit number	Writeable	N/A	N/A
Device address	Unique address used by the device to identify itself on the LoRaWAN network (only applicable in ABP mode).	Device-unique 32-bit number	Writeable	N/A	N/A
Network session key	Encryption key for payload data (only applicable in ABP mode).	Device-unique 128-bit number	Writeable	N/A	N/A
Current data rate	The current data rate used for the module.	N/A	Readable	Readable	N/A

Table 2: Configuration options

6.4 Adaptive data rate (ADR)

ADR is part of the LoRaWAN standard where the network server determines the optimal rate of communication for the module based on current signal conditions. In best case, the module will use its highest data rate (DR5) in order to be as energy-efficient as possible. When signal conditions are poor, the network server will incrementally lower the data rate until it is able to receive the message. When the data rate is low, the energy consumption per telegram will increase.

6.5 Transmit interval

6.5.1 EcoMode

When EcoMode is active, a battery-lifetime of at least 11+1 years is guaranteed for the module. The module is able to achieve this by adapting its transmit interval to current signal conditions on the LoRaWAN network. In other words, when signal conditions are poor (and data rate is low), the module will send data less frequently in order to conserve battery-life. When signal conditions are decent, the module will be able to send data more frequently.



Table 3 summarizes the transmit interval for different data rates **FW < 1.07**.

Data rate	Transmit interval
DR0	60 minutes
DR1 - DR2	30 minutes
DR3 - DR5	15 minutes

Table 3: Data rate and transmit interval

Table 4 summarizes the transmit interval for different data rates FW >= 1.07.

Data rate	Transmit interval
DR0	120 minutes
DR1 - DR2	60 minutes
DR3 - DR5	30* minutes

Table 4: Data rate and transmit interval

Set the transmit interval manually

If the transmit interval needs to be set to a fixed value, EcoMode can be disabled. Use the Elvaco OTC App to configure the transmit interval.



If EcoMode has been disabled, guarantees about battery-life no longer apply, even if EcoMode is activated later on.

Set an upper limit for number of daily telegrams

In some cases, it might be necessary to limit the number of daily telegrams that the module should be allowed to send. By using the MaxDTx parameter, such a limit can be easily set. For example, by setting MaxDTx to "24", no more than 24 telegrams will be transmitted each day (regardless of the data rate). Table 4 provides a set of examples.

MaxDTx value	Maximum transmit interval
1	Once per day
24	Once per hour
48	Once per 30 minutes
96	Once per 15 minutes

Table 4: MaxDTx setting



To achieve a battery life time of 16+1 (storage) years, the MaxDTx parameter needs to be set to 9 or lower.

6.6 Message formats

CMi4110 has seven different message formats: Standard, Compact, JSON, Scheduled-daily redundant, Scheduled-extended, Extended + and Compact tariff. Each message type will be described in detail in this section. All data messages from the module will be transmitted on LoRa port 2.

^{*}Note that since Extended+ is scheduled the minimum practical limit is always 60 minutes.



6.6.1 Message structure

All message formats except for *JSON* are encoded according to M-Bus standard. Each telegram begins with one byte specifying the message format. Then follows a sequence of data information blocks (DIBs). The data and structure of the DIBs depends on the message type set. Each DIB contains a data information field (DIF), a value information field (VIF) and a data field (DATA), where the actual payload is stored. The structure is illustrated by Figure 4.

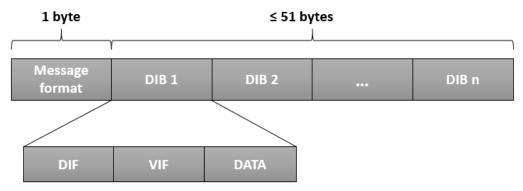


Figure 4: CMi4110 M-Bus message structure

For message type JSON, the data is presented as plain text.

Field	Size	Description
Message type	1 byte	0x00 = Standard
		0x01 = Compact
		0x02 = JSON
		0x03 = Scheduled – daily redundant
		0x04 = Scheduled – extended
		0x3F = Scheduled - extended + telegram 1*
		0x40 = Scheduled - extended + telegram 2*
		0x41 = Compact tariff*
		• Only in FW >=1.0.7

Table 5: Message type field

6.6.2 Structure and payload

In this section, a detailed description of each message format is provided.

6.6.2.1 Standard

Figure 5 illustrates the structure of the message type for message format *Standard*. For a detailed description of the data included in each field, see Table 6.



Figure 5: Structure, message format Standard

^{*}Scheduled - extended + telegram 2 cannot be selected as a telegram type. It is the ID of the second telegram when using message format Scheduled - extended +.



DIB	Field	Size	Data type	Description
1	Energy	6-7 bytes	BCD8	Energy consumption (MWh, kWh, MJ, GJ)
		(including DIF/VIF)	M-Bus Type A	Mapped to OBIS 6.8
				0C06xxxxxxxx = kWh 0C07xxxxxxxx = MWh, 2 decimals 0CFB00xxxxxxxx = MWh, 1 decimal 0CFB01xxxxxxxx = MWh, 0 decimals 0C0Exxxxxxxx = GJ, 3 decimals 0C0Fxxxxxxxx = GJ, 2 decimals 0CFB08xxxxxxxx = GJ, 1 decimal 0CFB09xxxxxxxx = GJ, 0 decimals
				If first byte is set to "3C" instead of "0C", this indicates value during error state
2	Volume	6 bytes	BCD8 M-Bus Type A	Volume (m³)
		(including DIF/VIF)	Wi-bus Type A	Mapped to OBIS 6.26
				0C14xxxxxxxx = m³, 2 decimals 0C15xxxxxxxx = m³, 1 decimal 0C16xxxxxxxx = m³, 0 decimals
				If first byte is set to "3C" instead of "0C", this indicates value during error state
3	Power	5 bytes	BCD6	Power (kW)
		(including DIF/VIF)	M-Bus Type A	Mapped to OBIS 6.4
				0B2Bxxxxxx = kW, 3 decimals 0B2Cxxxxxx = kW, 2 decimals 0B2Dxxxxxx = kW, 1 decimal 0B2Exxxxxx = kW, 0 decimals
				If first byte is set to "3B" instead of "0B", this indicates value during error state
4	Flow	5 bytes (including	BCD6 M-Bus Type A	Flow (m ³ /h)
		DIF/VIF)	INI DUS TYPE A	Mapped to OBIS 6.27
				0B3Bxxxxxx = m³/h, 3 decimals 0B3Cxxxxxx = m³/h, 2 decimals 0B3Dxxxxxx = m³/h, 1 decimal 0B3Exxxxxx = m³/h, 0 decimals
				If first byte is set to "3B" instead of "0B", this indicates value during error state
5	Fw temp	4 bytes	BCD4	Forward temperature (°C)
		(including DIF/VIF)		Mapped to OBIS 6.29
				0A5Axxxx = °C, 1 decimal 0A5Bxxxx = °C, 0 decimals



DIB	Field	Size	Data type	Description
				If first byte is set to "3A" instead of "0A", this indicates value during error state
6	Rt temp	4 bytes (including DIF/VIF)	BCD4	Return temperature (°C) Mapped to OBIS 6.28 0A5Exxxx = °C, 1 decimal 0A5Fxxxx = °C, 0 decimals
				If first byte is set to "3A" instead of "0A", this indicates value during error state
7	Meter ID	6 bytes (including DIF/VIF)	According to M- Bus EN13757-3 identification field	Meter ID 0C78xxxxxxxx
				If first byte is set to "3C" instead of "0C", this indicates value during error state
8	Error flags	5 bytes (including DIF/VIF)	Uint16 M-Bus Type C	Error and warning flags 02FD17xxxx
				If first byte is set to "32" instead of "02", this indicates value during error state

Table 6: DIB fields, message type standard

6.6.2.2 Compact

Figure 6 illustrates the structure for message format Compact. For a detailed description of the data included in each field, see Table 7.



Figure 6: DIB structure, message type compact



DIB	Field	Size	Data type	Description
1	Energy	6 bytes (including DIF/VIF)	BCD8 M-Bus Type A	Energy consumption (MWh, kWh, MJ, GJ)
				Mapped to OBIS 6.8
				0C06xxxxxxxx = MWh, 3 decimals =kWh 0C07xxxxxxxx = MWh, 2 decimals 0CFB00xxxxxxxx = MWh, 1 decimal 0CFB01xxxxxxxx = MWh, 0 decimals 0C06xxxxxxxx = kWh 0C0Exxxxxxxx = GJ, 3 decimals 0C0Fxxxxxxxx = GJ, 2 decimals 0CFB08xxxxxxxx = GJ, 1 decimal 0CFB09xxxxxxxx = GJ, 0 decimals
				If first byte is set to "3C" instead of "0C", this indicates value during error state
2	Meter	6 bytes	According to M-Bus	Meter ID
	ID	(including DIF/VIF)	EN13757-3 identification field	0C78xxxxxxxx
				If first byte is set to "3C" instead of "0C", this indicates value during error state
3	Error	5 bytes	Uint16	Error and warning flags
	flags	(including DIF/VIF)	M-Bus Type C	02FD17xxxx =Error and warning flags
				If first byte is set to "32" instead of "02", this indicates value during error state

Table 7: DIB fields, message type compact

JSON

For message format *JSON*, the data is presented in a plain text format. Table 8 provides a description of all fields included in the telegram.

Field	Description
Energy	Energy consumption
Unit	Unit of energy consumption
Meter ID	Identification number of the meter in which the module is mounted

Table 8: Fields, message type JSON

In Figure 7 an example of a message type JSON telegram is presented.

{"E":"12345.678","U":"MWh","ID":87654321}

Figure 7: JSON message example

6.6.2.4 Scheduled mode

When using message format *Scheduled*, two types of messages will be transmitted from the module: a clock message and a data message. The difference between the two is described in Table 9. There are two types of scheduled mode message types: *daily redundant* and *extended*.



Message	Time interval	Description
Clock message	Once per day	The clock message presents the current time of UH50/UC50. It can be used to verify that the clock is correct and has not drifted more than accepted. Byte 0 = 0xFA Byte 1 = DIF, 0x04 = valid, 0x34 =invalid Byte 2 = VIF, 0x6D Byte 3-6 = 32-bit date/time encoded as M-Bus format F
Data message	Determined by MaxDTx parameter.	The data message contains the fields listed in Table 11.

Table 9: Clock message and data message

The clock message will be transmitted once every day and the data message <u>at least</u> (regulated by MaxDTx parameter) once every day (on LoRa port 3). Figure 8 illustrates the principle. Note that although the meter readout will occur on top-of-the-hour, the data message will not necessarily be transmitted at that exact time. The LoRa transmission will occur after a random delay of 1-30 minutes. The meter readout for the clock message occurs at a random hour (00:00-23:00) at a random minute in the 35-45 interval. The clock message will be transmitted immediately after readout.



When using message type Scheduled, the MaxDTx cannot not be set higher than 24.

The transmit interval of the data message is adapted to current data rate and MaxDTx settings. Note that for message type *Scheduled*, the MaxDTx parameter can only assume the values listed in Table 10.

Parameter	Values
MaxDTx	1, 2, 3, 4, 6, 8, 12, 24

Table 10: MaxDTx values for message type scheduled


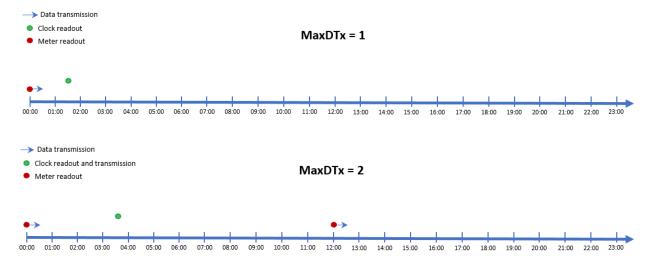


Figure 8: Data messages and MaxDTx settings



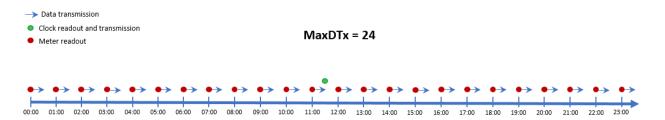

Scheduled- daily redundant

The data message of message format *Scheduled mode-daily redundant* contains an accumulated daily energy field, which is updated at 24:00 each day. Depending on MaxDTx settings and data rate, the field will be included in between 1-24 data messages per day. This will increase the probability of the value being received. For example, if MaxDTx is set to "12", the accumulated energy read at 24:00 will be transmitted 12 times during the 24 next coming hours.



Figure 9: DIB structure, message type scheduled – daily redundant

DIB	Field	Size	Data type	Description
1	Energy	6 bytes (including DIF/VIF)	BCD8 M-Bus Type A	Energy consumption (MWh, kWh, MJ, GJ)
		DIF/VIF)		Mapped to OBIS 6.8
				0C06xxxxxxxx = MWh, 3 decimals = kWh 0C07xxxxxxxx = MWh, 2 decimals
				0CFB00xxxxxxxx = MWh, 1 decimal 0CFB01xxxxxxxx = MWh, 0 decimals 0C0Exxxxxxxx = GJ, 3 decimals
				0C0Fxxxxxxxx = GJ, 2 decimals 0CFB08xxxxxxxx = GJ, 1 decimal
				0CFB09xxxxxxxx = GJ, 0 decimals
				If first byte is set to "3C" instead of "0C", this indicates value during error state
2	Meter ID	6 bytes (including	According to M-Bus EN13757-3	Meter ID
		DIF/VIF)	identification field	0C78xxxxxxxx
				If first byte is set to "3C" instead of "0C",
				this indicates value during error state



DIB	Field	Size	Data type	Description
3	Meter	6 bytes	M-Bus Type F	Meter date and time (YY-MM-DD HH:MM)
	date/time	(including DIF/VIF)		Mapped to OBIS 9.36
				046Dxxxxxxxx
				Bit 31-28 = Year-high* Bit 27-24 = Month Bit 23-21 = Year-low* Bit 20-16 = Day Bit 15 = Summer time flag** Bit 14-13 = Century Bit 12-8 = Hour Bit 7 = Error flag Bit 6 = Reserved for future use*** Bit 5-0 = Minute
				*The year is read by combining the year-high and year-low field. For example, year-high = 0010 and year-low = 010 => year = 0010010
				**0 = standard time, 1= daylight-saving time
				***0 = timestamp is valid, 1 = timestamp is not valid
			2000	If first byte is set to "34" instead of "04", this indicates value during error state
4	Accumulated energy at 24:00	6 Bytes (including	BCD8 M-Bus Type A	Energy consumption (MWh, kWh, MJ, GJ)
	=	DIF/VIF)		Mapped to OBIS 6.8
				4C06xxxxxxxx = MWh, 3 decimals = kWh 4C07xxxxxxxx = MWh, 2 decimals 4CFB00xxxxxxxx = MWh, 1 decimal 4CFB01xxxxxxxx = MWh, 0 decimals 4C0Exxxxxxxx = GJ, 3 decimals 4C0Fxxxxxxxx = GJ, 2 decimals 4CFB08xxxxxxxx = GJ, 1 decimal 4CFB09xxxxxxxx = GJ, 0 decimals
				If first byte is set to "3C" instead of "4C", this indicates value during error state
4	Error flags	5 bytes (including	Uint16 M-Bus Type C	Error and warning flags
		DIF/VIF)		02FD17xxxx =Error and warning flags
				If first byte is set to "32" instead of "02", this indicates value during error state

Table 11: DIB fields, message type scheduled – daily redundant

Scheduled-extended

The data message of message format Scheduled mode-extended contains all the meter data included in



the Standard telegram. In addition to these, a timestamp from the meter (meter date/time) is included in each telegram.

DIB	Field	Size	Data type	Description
1	Energy	6 bytes	BCD8	Energy consumption (MWh, kWh, MJ, GJ)
		(including	M-Bus Type A	Managed to ORIG C 0
		DIF/VIF)		Mapped to OBIS 6.8
				0C06xxxxxxxx = MWh, 3 decimals = kWh
				0C07xxxxxxxx = MWh, 2 decimals
				OCFB01xxxxxxxx = MWh, 1 decimal
				0CFB01xxxxxxxx = MWh, 0 decimals 0C0Exxxxxxxx = GJ, 3 decimals
				0C0Fxxxxxxxx = GJ, 2 decimals
				0CFB08xxxxxxxx = GJ, 1 decimal
				0CFB09xxxxxxxx = GJ, 0 decimals
				If first byte is set to "3C" instead of "0C", this
				indicates value during error state
2	Volume	6 bytes	BCD8	Volume (m³)
		(including	M-Bus Type A	,
		DIF/VIF)		Mapped to OBIS 6.26
				0C14xxxxxxxx = m ³ , 2 decimals
				0C15xxxxxxxx = m ³ , 1 decimal
				0C16xxxxxxxx = m ³ , 0 decimals
				If first byte is set to "3C" instead of "0C", this
				indicates value during error state
3	Power	5 bytes	BCD8	Power (kW)
		(including	M-Bus Type A	Mannad to ORIS 6.4
		DIF/VIF)		Mapped to OBIS 6.4
				0B2Bxxxxxx = kW, 3 decimals
				0B2Cxxxxxx = kW, 2 decimals
				0B2Dxxxxxx = kW, 1 decimal
				0B2Exxxxxx = kW, 0 decimals
				If first byte is set to "3B" instead of "0B", this
				indicates value during error state
4	Flow	5 bytes	BCD6	Flow (m ³ /h)
		(including DIF/VIF)	M-Bus Type A	Mapped to OBIS 6.27
				0B3Bxxxxxx = m ³ /h, 3 decimals
				0B3Cxxxxxx = m ³ /h, 2 decimals
				0B3Dxxxxxx = m ³ /h, 1 decimal 0B3Exxxxxx = m ³ /h, 0 decimals
				ODOLAAAAA – III /II, O GGGIIIGIS
				If first byte is set to "3B" instead of "0B", this
				indicates value during error state



DIB	Field	Size	Data type	Description
5	Fw temp	4 bytes	BCD4	Forward temperature (°C)
		(including DIF/VIF)		Mapped to OBIS 6.29
				0A5Axxxx = °C, 1 decimal
				0A5Bxxxx = °C, 0 decimals
				If first byte is set to "3A" instead of "0A", this indicates value during error state
6	Rt temp	4 bytes	BCD4	Return temperature (°C)
		(including DIF/VIF)		Mapped to OBIS 6.28
				0A5Exxxx = °C, 1 decimal
				0A5Fxxxx = °C, 0 decimals
				If first byte is set to "3A" instead of "0A", this indicates value during error state
7	Meter ID	6 bytes	According to M-	Meter ID
		(including DIF/VIF)	Bus EN13757-3 identification field	0C78xxxxxxxx = Meter ID
				If first byte is set to "3C" instead of "0C", this
8	Meter	6 bytes	M-Bus Type F	indicates value during error state Meter date and time (YY-MM-DD HH:MM)
	date/time	(including DIF/VIF	W Dus Type I	Mapped to OBIS 9.36
		DIF/VIF		
				046Dxxxxxxxx
				Bit 31-28 = Year-high* Bit 27-24 = Month
				Bit 27-24 = Month Bit 23-21 = Year-low*
				Bit 20-16 = Day
				Bit 15 = Summer time flag**
				Bit 14-13 = Century Bit 12-8 = Hour
				Bit 7 = Error flag
				Bit 6 = Reserved for future use*** Bit 5-0 = Minute
				*The year is read by combining the year-high
				and year-low field. For example, year-high =
				0010 and year-low = 010 => year = 0010010
				**0 = standard time, 1= daylight-saving time
				***0 = timestamp is valid, 1 = timestamp is not valid
				If first byte is set to "34" instead of "04", this indicates value during error state



DIB	Field	Size	Data type	Description
9	Error flags	5 bytes (including	Uint16 M-Bus Type C	Error and warning flags
		DIF/VIF)	W-bus Type C	02FD17xxxx
				If first byte is set to "32" instead of "02", this indicates value during error state

Scheduled - extended +

The data message of message format *Scheduled mode-extended* + contains three tariffs and all the meter data included in the *Standard* telegram. In addition to these, a timestamp from the meter (meter date/time) is included in each telegram. It also is divided into two telegrams for keeping each telegram below 45 bytes.

Telegram 1

DIB	Field	Size	Data type	Description
1	Energy	6 bytes	BCD8	Energy consumption (MWh, kWh, MJ, GJ)
		(including DIF/VIF)	M-Bus Type A	Mapped to OBIS 6.8
				0C06xxxxxxxx = MWh, 3 decimals = kWh 0C07xxxxxxxx = MWh, 2 decimals
				OCFB00xxxxxxxx = MWh, 1 decimal
				0CFB01xxxxxxxx = MWh, 0 decimals
				0C0Exxxxxxxx = GJ, 3 decimals 0C0Fxxxxxxxx = GJ, 2 decimals
				OCFB08xxxxxxxx = GJ, 1 decimal
				0CFB09xxxxxxxx = GJ, 0 decimals
				If first byte is set to "3C" instead of "0C", this
				indicates value during error state
2	Tariff 1	8 bytes	BCD8	Energy consumption (MWh, kWh, MJ, GJ)
		(including DIF/VIF)	M-Bus Type A	Mapped to OBIS 6.8.1
				0C06xxxxxxxx = MWh, 3 decimals = kWh
				0C07xxxxxxxx = MWh, 2 decimals
				0CFB00xxxxxxxx = MWh, 1 decimal 0CFB01xxxxxxxx = MWh, 0 decimals
				0C0Exxxxxxxx = GJ, 3 decimals
				0C0Fxxxxxxxx = GJ, 2 decimals
				0CFB08xxxxxxxx = GJ, 1 decimal 0CFB09xxxxxxxx = GJ, 0 decimals
				OUI DOUANANAA – OU, U decimais
				If first byte is set to "3C" instead of "0C", this
2	Toriff O	0 bytoo	PCD0	indicates value during error state
3	Tariff 2	8 bytes (including	BCD8 M-Bus Type A	Energy consumption (MWh, kWh, MJ, GJ)
		DIF/VIF)	200 .) 0 . 1	Mapped to OBIS 6.8.4
				0C06xxxxxxxx = MWh, 3 decimals = kWh
				0C07xxxxxxxx = MWh, 2 decimals
				0CFB00xxxxxxxx = MWh, 1 decimal 0CFB01xxxxxxxx = MWh, 0 decimals
				0C0Exxxxxxxx = GJ, 3 decimals



DIB	Field	Size	Data type	Description
				0C0Fxxxxxxxx = GJ, 2 decimals 0CFB08xxxxxxxx = GJ, 1 decimal 0CFB09xxxxxxxx = GJ, 0 decimals If first byte is set to "3C" instead of "0C", this
				indicates value during error state
4	Tariff 3	8 bytes (including	BCD8 M-Bus Type A	Energy consumption (MWh, kWh, MJ, GJ)
		DIF/VIF)		Mapped to OBIS 6.8.5 0C06xxxxxxxx = MWh, 3 decimals = kWh 0C07xxxxxxxx = MWh, 2 decimals 0CFB00xxxxxxxx = MWh, 1 decimal 0CFB01xxxxxxxx = MWh, 0 decimals 0C0Exxxxxxxx = GJ, 3 decimals 0C0Fxxxxxxxx = GJ, 2 decimals 0CFB08xxxxxxxx = GJ, 1 decimal 0CFB09xxxxxxxx = GJ, 0 decimals
				If first byte is set to "3C" instead of "0C", this indicates value during error state
5	Meter ID	6 bytes (including DIF/VIF)	BCD8	Meter ID 0C78xxxxxxxx = Meter ID
				If first byte is set to "3C" instead of "0C", this indicates value during error state
6	Date & time	6 bytes (including DIF/VIF)	M-Bus Format F	Meter date and time (YY-MM-DD HH:MM) Mapped to OBIS 9.36 046Dxxxxxxxx
				Bit 31-28 = Year-high* Bit 27-24 = Month Bit 23-21 = Year-low* Bit 20-16 = Day Bit 15 = Summer time flag** Bit 14-13 = Century Bit 12-8 = Hour Bit 7 = Error flag Bit 6 = Reserved for future use*** Bit 5-0 = Minute
				*The year is read by combining the year-high and year-low field. For example, year-high = 0010 and year-low = 010 => year = 0010010
				**0 = standard time, 1= daylight-saving time
				***0 = timestamp is valid, 1 = timestamp is not valid
				If first byte is set to "34" instead of "04", this indicates value during error state



Telegram 2

DIB	Field	Size	Data type	Description
1	Volume	6 bytes	BCD8	Volume (m³)
		(including	M-Bus Type A	
		DIF/VIF		Mapped to OBIS 6.26
				0C14xxxxxxxx = m ³ , 2 decimals
				0C15xxxxxxxx = m ³ , 1 decimal
				0C16xxxxxxxx = m ³ , 0 decimals
				If first byte is set to "3C" instead of "0C", this
2	Power	5 bytes	BCD8	indicates value during error state Power (kW)
2	rowei	(including	M-Bus Type A	Tower (KW)
		DIF/VIF	Bus Type 7.	Mapped to OBIS 6.4
				0B2Bxxxxxx = kW, 3 decimals
				0B2Cxxxxxx = kW, 2 decimals
				0B2Dxxxxxx = kW, 1 decimal
				0B2Exxxxxx = kW, 0 decimals
				If first byte is set to "3B" instead of "0B", this
				indicates value during error state
3	Flow	5 bytes	BCD6	Flow (m ³ /h)
		(including	M-Bus Type A	
		DIF/VIF		Mapped to OBIS 6.27
				0B3Bxxxxxx = m ³ /h, 3 decimals
				0B3Cxxxxxx = m ³ /h, 2 decimals
				0B3Dxxxxxx = m ³ /h, 1 decimal
				0B3Exxxxxx = m ³ /h, 0 decimals
				If first byte is set to "3B" instead of "0B", this
				indicates value during error state
4	Fwd temp	4 bytes (including	BCD4	Forward temperature (°C)
	remp	DIF/VIF		Mapped to OBIS 6.29
				0A5Axxxx = °C, 1 decimal
				0A5Bxxxx = °C, 0 decimals
				If first byte is set to "3A" instead of "0A", this
				indicates value during error state
5	Rtn temp	4 bytes	BCD4	Return temperature (°C)
		(including		Manned to ORIS 6.29
		DIF/VIF		Mapped to OBIS 6.28
				0A5Exxxx = °C, 1 decimal
				0A5Fxxxx = °C, 0 decimals
				If first buts is set to "2 A" instead of "0 A" this
				If first byte is set to "3A" instead of "0A", this
				indicates value during error state



DIB	Field	Size	Data type	Description
6	Meter ID	6 bytes (including DIF/VIF	According to M- Bus EN13757-3 identification field	Meter ID 0C78xxxxxxxx = Meter ID
		J, v		If first byte is set to "3C" instead of "0C", this indicates value during error state
7	Date & time	6 bytes (including DIF/VIF	M-Bus Type F	Meter date and time (YY-MM-DD HH:MM) Mapped to OBIS 9.36
				046Dxxxxxxxx
				Bit 31-28 = Year-high* Bit 27-24 = Month Bit 23-21 = Year-low* Bit 20-16 = Day Bit 15 = Summer time flag** Bit 14-13 = Century Bit 12-8 = Hour Bit 7 = Error flag Bit 6 = Reserved for future use*** Bit 5-0 = Minute *The year is read by combining the year-high and year-low field. For example, year-high = 0010 and year-low = 010 => year = 0010010
				0 = standard time, 1= daylight-saving time *0 = timestamp is valid, 1 = timestamp is not valid
				If first byte is set to "34" instead of "04", this indicates value during error state
8	Error flags	5 bytes (including DIF/VIF	Uint16 M-Bus Type C	Error and warning flags 02FD17xxxx
				If first byte is set to "32" instead of "02", this indicates value during error state

Compact Tariff

Compact tariff message contains three tariffs and the current energy. Included is also meter ID and error flags.

DIB	Field	Size	Data type	Description
1	Energy	6 bytes (including	BCD8 M-Bus Type A	Energy consumption (MWh, kWh, MJ, GJ)
		DIF/VIF)		Mapped to OBIS 6.8
				0C06xxxxxxxx = MWh, 3 decimals = kWh 0C07xxxxxxxx = MWh, 2 decimals
				0CFB00xxxxxxxx = MWh, 1 decimal 0CFB01xxxxxxxx = MWh, 0 decimals
				0C0Exxxxxxxx = GJ, 3 decimals



DIB	Field	Size	Data type	Description
				0C0Fxxxxxxxx = GJ, 2 decimals 0CFB08xxxxxxxx = GJ, 1 decimal 0CFB09xxxxxxxx = GJ, 0 decimals If first byte is set to "3C" instead of "0C", this indicates value during error state
2	Tariff 1	8 bytes (including DIF/VIF)	BCD8 M-Bus Type A	Energy consumption (MWh, kWh, MJ, GJ) Mapped to OBIS 6.8.1 0C06xxxxxxxx = MWh, 3 decimals = kWh 0C07xxxxxxxx = MWh, 2 decimals 0CFB00xxxxxxxx = MWh, 1 decimal 0CFB01xxxxxxxx = MWh, 0 decimals 0C0Exxxxxxxx = GJ, 3 decimals 0C0Exxxxxxxxx = GJ, 2 decimals 0CFB08xxxxxxxx = GJ, 1 decimal 0CFB09xxxxxxxxx = GJ, 0 decimals If first byte is set to "3C" instead of "0C", this indicates value during error state
3	Tariff 2	8 bytes (including DIF/VIF)	BCD8 M-Bus Type A	Energy consumption (MWh, kWh, MJ, GJ) Mapped to OBIS 6.8.4 0C06xxxxxxxx = MWh, 3 decimals = kWh 0C07xxxxxxxx = MWh, 2 decimals 0CFB00xxxxxxxx = MWh, 1 decimal 0CFB01xxxxxxxx = MWh, 0 decimals 0C0Exxxxxxxx = GJ, 3 decimals 0C0Exxxxxxxxx = GJ, 2 decimals 0CFB08xxxxxxxx = GJ, 1 decimal 0CFB09xxxxxxxxx = GJ, 0 decimals If first byte is set to "3C" instead of "0C", this indicates value during error state
4	Tariff 3	8 bytes (including DIF/VIF)	BCD8 M-Bus Type A	Energy consumption (MWh, kWh, MJ, GJ) Mapped to OBIS 6.8.5 0C06xxxxxxxx = MWh, 3 decimals = kWh 0C07xxxxxxxx = MWh, 2 decimals 0CFB00xxxxxxxx = MWh, 1 decimal 0CFB01xxxxxxxx = MWh, 0 decimals 0C0Exxxxxxxx = GJ, 3 decimals 0C0Exxxxxxxxx = GJ, 2 decimals 0CFB08xxxxxxxx = GJ, 1 decimal 0CFB09xxxxxxxxx = GJ, 0 decimals If first byte is set to "3C" instead of "0C", this indicates value during error state
5	Meter ID	6 bytes (including DIF/VIF	According to M- Bus EN13757-3 identification field	Meter ID 0C78xxxxxxxx = Meter ID



DIB	Field	Size	Data type	Description
				If first byte is set to "3C" instead of "0C", this indicates value during error state
6	Error flags	5 bytes (including DIF/VIF	Uint16 M-Bus Type C	Error and warning flags 02FD17xxxx
				If first byte is set to "32" instead of "02", this indicates value during error state

Meter communication error message

When CMi4110 is unable to communicate with UH50/UC50, an error message will be transmitted on the LoRaWAN network. Table 12 describes that error message for each message type.

Message type	Error message
Standard	0E00
Compact	0E00
JSON	{}
Scheduled-daily redundant	0E00
Scheduled – extended +	0E00
Conpact tariff	0E00

Table 12: Meter communication error message

6.7 Downlink

CMi4110 supports configuration via downlink, i.e. sending commands to an end-device via the LoRaWAN network. **Note that this feature should only be used sparingly due to bandwidth consideration.**Communication via downlink can only be made in a short window after an uplink transmission from module to server. Therefore, time-critical communication should not be performed over downlink.

Some appropriate use of downlink commands is:

- Adjusting the meter clock when message type scheduled is used.
- Adjusting the MaxDTx parameter in order to optimize the performance of CMi4110 on the LoRaWAN network.

Downlink are sent on **port 2**, structured according to the following format: "0x00" "TLV" "Number of bytes in configuration" "Configuration". For a complete description of all available downlink commands, see Table 13.

Field name	TLV (Type Length Value)	Number of bytes in configuration	Configuration
Configuration lock	0x05	0x01	0x00 = Locked 0x01 = Open
Transmit interval (only applies when EcoMode is inactive)	0x06	0x02	0xNumber of minutes (IsByte -> msByte)
Message format	0x07	0x01	0x00 = Message format Standard



Field name	TLV (Type Length Value)	Number of bytes in configuration	Configuration
			0x01 = Message format Compact 0x02 = Message format JSON 0x03 = Message format Scheduled-daily redundant 0x04 = Message format Scheduled-extended 0x3F = Message format Scheduled-extended + (1/2) 0x40 = Message format Scheduled-extended + (2/2) 0x41 = Message format Compact tariff *Scheduled - extended + telegram 2 cannot be selected as a telegram type. It is the ID of the second telegram when using message format Scheduled - extended +
Date & Time	0x11	0x02	ОхННММ
Set Date	0x12	0x03	0xYYMMDD
Set Time Relative	0x13	0x02	0xNumber of minutes* *Negative numbers supported.
EcoMode	0x0F	0x01	0x00 = Disable EcoMode 0x01 = Enable EcoMode
Maximum daily transmissions	0x21	0x01	0xNumber of transmissions

Table 13: Downlink commands



Example: To set the MaxDTx parameter to 24, the following command would be sent by downlink: 0x00 21 01 18



Technical specifications

Туре	Value	Unit	Comments		
Mechanics					
Protection class	IP54	-			
Dimensions (w x h x d)	80 x 38 x 23	mm			
Weight	35	g			
Mounting	In Landis+Gyr UH50/UC50 module slot 2	-			
External antenna connector	SMA female	-			
	Electrical connections				
Supply voltage	Internal meter battery or PSU	-	PSU options: Elvaco CMip2110 230V, Landis+Gyr WZU-AC230-xx or WZU- ACDC24-00		
	Electrical characteristic	S			
Nominal voltage	3.0 - 5.0	VDC			
Power consumption (max)	40	mA			
Power consumption (sleep mode)	2.2	μA			
	Environmental specification	ons			
Operating temperature	5 - 55	°C			
Operating humidity	0 - 93	% RH	No condensation		
Operating altitude	2000	m			
Pollution degree	Degree 1	-			
Usage environment	Indoors	-			
Storage temperature	-20 - 60	°C			
Radio characteristics					
Frequency	868	MHz			
Output power	14	dBm			
Receiver sensitivity	-135	dBm			
LoRaWAN characteristics					
Device class	Class A	-	Bi-directional		
LoRa version	1.0	-			
Activation	OTAA or ABP	-			
Data rate	DR0 - DR5	-	250 – 5470 bit/s		
User interface					
Green LED	Status	-			
Red LED	Error	-			
Push button	Start-up / reboot / switch off module	-			



	NFC via Elvaco OTC app or
downlink data	downlink data



8 Type approvals

CMi4110 is designed to comply with the directives and standards listed below.

Approval	Description
EMC	EN 301 489-1, EN 301 489-3



Document history

9.1 **Versions**

Version	Date	Description
v1.0	2018-07	Initial version
v1.1	2018-10	Information about Scheduled – extended added
v1.2	2019-03	Corrected DIF/VIF for energy DIB
v1.3	2019-04	Added information about EcoMode
V1.4	2020-03	Added information about value during error state in message formats
V1.5	2021-10	Added information related to FW 1.0.7. New message types, new eco mode table



10 References

10.1 Terms and abbreviations

Abbreviation	Description
DIB	Data Information Block
DIF	Data Information Field
VIF	Value Information Field
MCM	Meter Connectivity Module

10.2 Number representation

- Decimal numbers are represented as normal number, i.e. 10 (ten).
- Hexadecimal numbers are represented with prefix 0x, i.e. 0x0A (ten)
- Binary numbers are represented with prefix 0b, i.e. 0b00001010 (ten)